



Owner's Handbook

PCML2015-01

Coffee Grinder

IMPORTANT SAFETY INSTRUCTIONS	1	CABLE STORAGE.....	8
CARE AND CLEANING	4	Stowing the cable.....	8
Cleaning with a dry brush.....	4	Pulling out the cable.....	8
Cleaning with a damp cloth	4	SPECIFICATIONS.....	8
UNPACKING.....	4	WARRANTY	9
CONTROLS AND FEATURES.....	5		
OPERATION.....	6		
First use	6		
Food suitable for grinding.....	6		
Grinding coffee.....	6		
Grinding times	7		
Maximum grinding time	7		
When you have finished grinding the coffee	7		
After use	7		
Coffee grinding tips	7		

Please keep your sales docket, including cash register receipt, in a safe place as the docket will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, preferably your sales docket.

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance for the first time.

- Always use the appliance from a power outlet of the same voltage (A.C. only) marked on the appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug from power outlet when appliance is not in use, before putting on or removing parts and before cleaning.
- Do not immerse the motor or control unit into water or other liquids.
- After cleaning the grinder, ensure that it is completely dry before using again.
- Ensure the grinder lid is in place before operating the unit.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance shall not be operated by means of an external timer or separate remote control system.
- Do not let the power cord of appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not place the appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.

IMPORTANT SAFETY INSTRUCTIONS

- Keep fingers well away from moving parts.
- Do not remove the cover until the blade has stopped.
- Do not attempt to operate the grinder without the cover in place.
- Do not use the appliance near flammable material such as curtains, draperies and wallpaper.
- For additional protection, it is recommended to use appliance with a residual current device (safety switch) with a tripping current not exceeding 30mA in the power socket which supply power to the appliance.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not suitable for use by persons (including children) who have limited physical, sensory or mental abilities, or by persons who have a lack of experience and/or lack of knowledge unless they are supervised by a person in charge for their security or receive instructions by them on how to use the appliance.
- Do not move the appliance while switched on.
- Always operate the appliance on a flat, level surface.
- Do not attempt to operate the appliance by any method other than those described in this user manual to avoid potential injury from misuse.
- Do not leave the appliance unattended during use.
- Do not use outdoors.

IMPORTANT SAFETY INSTRUCTIONS

- The use of accessories or attachments not supplied with appliance is not recommended.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from the grinder during operation to reduce the risk of injury to persons, and/or damage to the grinder.
- The grinder can run for a maximum of 3 times in succession. After this, the appliance must be left for 30 minutes to cool.
- Take care when handling the sharp blades during cleaning.
- This appliance is only intended for grinding coffee.
- Never exceed the maximum capacity of 36g.
- Never fill the grinding bowl with liquids of any kind.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or electrical or mechanical adjustment.
- Do not use the appliance with an extension power board.

CARE AND CLEANING

Never clean the grinder components with scourers, abrasive pads or chemicals.

The cover is not dishwasher-safe.

- Disconnect the grinder from mains power before cleaning it.
- Lift off the cover.

Cleaning with a dry brush

- The bowl and cover may be cleaned with a dry brush.

Cleaning with a damp cloth

- Wipe the grinding bowl with a damp cloth. Use extreme care as the blades are sharp.
- Hand-wash the cover with water and mild detergent.
- Dry all components thoroughly before use.

UNPACKING

Unpack the coffee grinder from the carton.

Retain the carton and packing for future use. If you have to dispose of the carton and packing, please do so responsibly.

 
The carton should contain -

1 x PCML2015-01 coffee grinder


1 x Owner's handbook

CONTROLS AND FEATURES

COVER FITTED

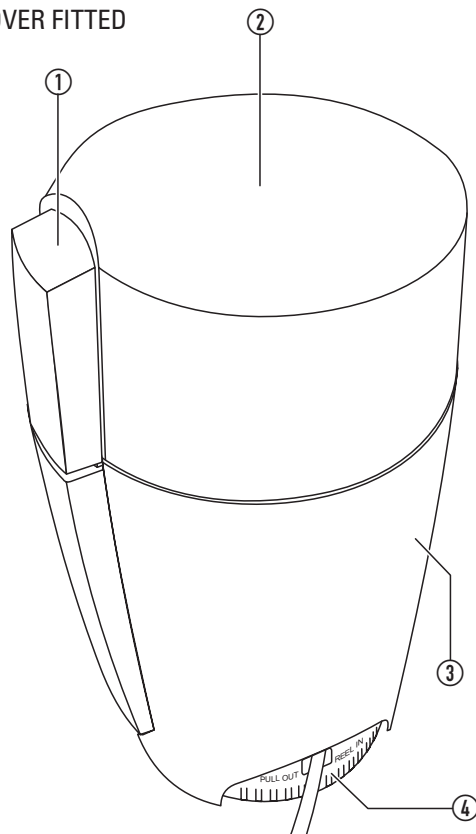

COVER REMOVED

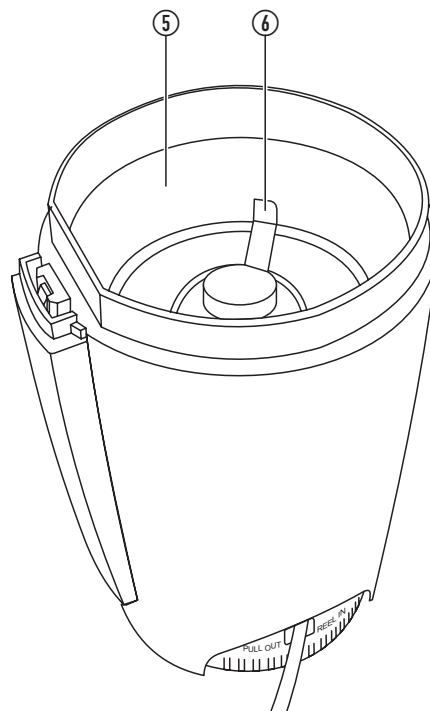 

1. Power switch
2. Cover
3. Motor body
4. Cable reel
5. Grinding bowl
6. Blade

OPERATION

First use

Before using your grinder for the first time you should ensure that the grinding bowl is thoroughly cleaned.

- Remove any packaging tape securing the grinder components together for shipping.
- Lift off the cover from the grinder.
- Wipe the grinding bowl inside and out with a damp cloth. Use extreme care as the blades are sharp.
- Wash the cover with water and mild detergent.
- Dry all components thoroughly before use.

Food suitable for grinding

The grinder can grind any hard, brittle food except peanuts, wheat, rice, barley or dried corn. Attempting to grind these foods may damage the unit.

Never grind anything that is extremely hard or moist such as ginger, chocolate, sesame seeds or oily spices.

For the very best results, grind only coffee beans as grinding other foods may cause your coffee to have an unpleasant flavour.

Grinding coffee

- Check that the power is disconnected.
- Place the grinder on a level, flat surface.
- Pour coffee beans into the grinding bowl. You can grind up to a maximum of 36g of coffee beans.
- Fit the cover.
- Connect the power cable to a mains outlet.
- Hold the cover down with one hand to steady the appliance, then press the power switch with the other hand.

The grinder will operate.

- Release the power switch when the coffee is ground as you want it.
- Wait until the blades have stopped if you need to remove the cover to check the coffee grinds.

OPERATION

Grinding times

As a guideline, the table below shows approximate grinding times for different volumes of coffee beans.

Weight	Time
12g	max 20 seconds
24g	max 25 seconds
36g	max 30 seconds

Maximum grinding time

You can run the grinder for a maximum of 3 times. After this, the appliance must be left for 30 minutes to cool.

When you have finished grinding the coffee

- Disconnect the power cable.
- Lift off the cover.
- Empty the coffee into a container that has an airtight lid to keep it fresh.

After use

- Follow the instructions in the Care and Cleaning section to clean the grinder components.
- When the components have dried, re-assemble the lid on the grinder for storage.
- Coil the power cable loosely and store the grinder in a safe place out of the reach of children.

Coffee grinding tips

Grind coffee in small batches as you need it. Ground coffee will become stale if stored for too long.

Experiment with grinding times to get the best result: Coarser ground coffee (shorter grinding time) is best suited to percolators. Medium ground coffee is best for filter coffee makers. Fine ground coffee is best for espresso makers.

 
Never grind spices in your coffee grinder, use a separate grinder for your spices. The flavour of the spices may affect the flavour of your coffee.

CABLE STORAGE

The coffee grinder includes a cable reel built into the base to enable the cable to be stowed when not in use.


Stowing the cable

Turn the cable reel in the direction shown to wind the cable into the base of the grinder.

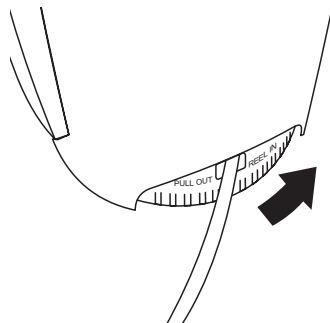

Pulling out the cable

 Pull the cable gently to unwind the cable from the reel.

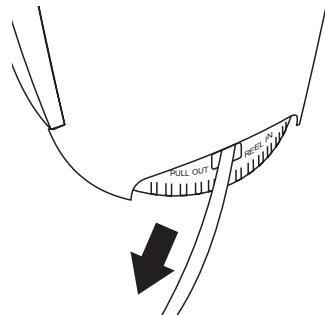

SPECIFICATIONS

Power supply..... 220 - 240V~, 50-60Hz

Power consumption..... 110W



Class II double insulated. This product must not be connected to earth.



WARRANTY

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Where a failure does not amount to a major failure, BIG W is entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by BIG W to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (eg from your doctor), depending on the loss or damage.
2. In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period of 24 months from the date of purchase.
3. In order to claim under this warranty you will need to bring the product to any BIG W store, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product – in accordance with our Returns Policy, a copy of which is available at our return desk
4. Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use.
5. The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.
6. This warranty is provided by BIG W of 1 Woolworths Way, Bella Vista NSW 2153, Phone: 1300 244 999.

contempo™

Made for Big W
1 Woolworths Way
Bella Vista NSW
2153 Australia

Made in China

CONTEMPO PCML2015-01 V0.2