

Brilliant Basics

I'm informative!

Owner's Handbook

KE01109-SA
1.7L Kettle

IMPORTANT SAFETY INSTRUCTIONS	1
CARE AND CLEANING	5
CONTROLS AND FEATURES	6
UNPACKING.....	7
PLACEMENT	7
OPERATION.....	8
SPECIFICATIONS.....	9
WARRANTY.....	10

Please keep your sales docket, including cash register receipt, in a safe place as the docket will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, preferably your sales docket.

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance for the first time.

- Always use kettle from a power outlet of the same voltage (A.C. only) marked on the kettle.
- This kettle includes an earthed pin and must be used with a power outlet with earthed connection.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when kettle is not in use and before cleaning.
- Do not use the appliance with an extension power board.

KE01109-SA**IMPORTANT SAFETY INSTRUCTIONS**

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The kettle shall not be operated by means of an external timer or separate remote control system.
- Do not let the power cord of the kettle hang over the edge of a table or bench top or touch any hot surface.
- Do not place the kettle on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- **WARNING:** Do not open the lid while water is boiling.
- **WARNING:** Misuse of this appliance may cause injury.
- **WARNING:** Avoid spilling water on the connector.
- **CAUTION:** This kettle should be used with a residual current device (safety switch) to lessen the risk of scalding or other injury from hot water that may be ejected if the heating element ruptures. Disregard this warning if your home is fitted with a residual current device (safety switch).
- Boiling water will scald. Do not leave a boiling or hot kettle near or where children may touch it.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.

IMPORTANT SAFETY INSTRUCTIONS

- This kettle is not suitable for use by persons (including children) who have limited physical, sensory or mental abilities, or by persons who have a lack of experience and/or lack of knowledge unless they are supervised by a person in charge for their security or receive instructions by them on how to use the kettle.
- Children should be supervised to ensure they do not play with the appliance.
- Do not operate the kettle unless the element is fully immersed in water or filled to the minimum level indicated.
- Do not overfill as boiling water may be ejected.
- CAUTION: Do not move the kettle while switched on.
- Always operate the kettle on a flat, level surface.
- Never leave the kettle unattended while in use.
- Do not use the kettle for any purposes other than for boiling water.
- Do not use the kettle outdoors.
- Do not immerse the kettle in water or any other liquid.
- Do not immerse the kettle in water for cleaning.
- Use of attachments or accessories not recommended or sold with the kettle may cause personal hazards, injuries or property damage.
- CAUTION: Do not operate the kettle on an inclined plane.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the boiling cycles.

KE01109-SA**IMPORTANT SAFETY INSTRUCTIONS**

- This appliance is intended to be used in household and similar applications such as :
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- The kettle is only to be used with the stand provided.
- **WARNING:** Position the lid so that steam is directed away from the handle.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or electrical or mechanical adjustment.
- **CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- **CAUTION:** The heating element surface is subject to residual heat after use.

CARE AND CLEANING


CAUTION: Never immerse the kettle, stand or cable in water during cleaning.

- Disconnect the kettle from mains power and ensure it has cooled before cleaning it.

Cleaning the filter


A mesh filter is located inside the spout to trap loose limescale particles. This should be cleaned regularly if limescale collects on the filter surface.

- Locate the filter inside the kettle, just behind the spout.
- To remove the filter, press the top of the filter firmly in the direction shown.

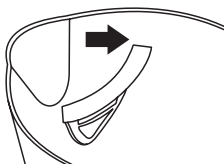

The filter will unclip.

- Lift the filter from the kettle.
- Rinse the filter in warm water and brush it if necessary to remove any limescale deposits.
- To re-fit the filter, locate the bottom of the filter first, then clip the top back into place.

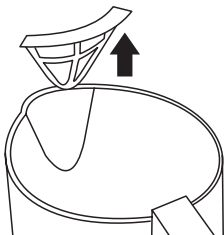

Main body

- Wipe the main body clean with a slightly damp cloth.
- Dry thoroughly before use.

Never clean the kettle with scourers, abrasive pads or chemicals.

De-scaling

In hard water areas, lime-scale deposits may appear on the inside surface of the kettle. These can be removed by regular de-scaling each month.


- Fill the kettle with three cups of white vinegar and the remainder with water. Allow to stand overnight and do not boil.
- Empty the kettle and use a damp cloth or sponge to remove any remaining scale or stains.
- Fill the kettle with clean water, bring to the boil, then discard the water. Repeat this process and the kettle will be ready to use.

De-scaling products may also be used. Follow the maker's instructions to make and use the de-scaler.

- Clean the body of the kettle after de-scaling.

KE01109-SA

CONTROLS AND FEATURES

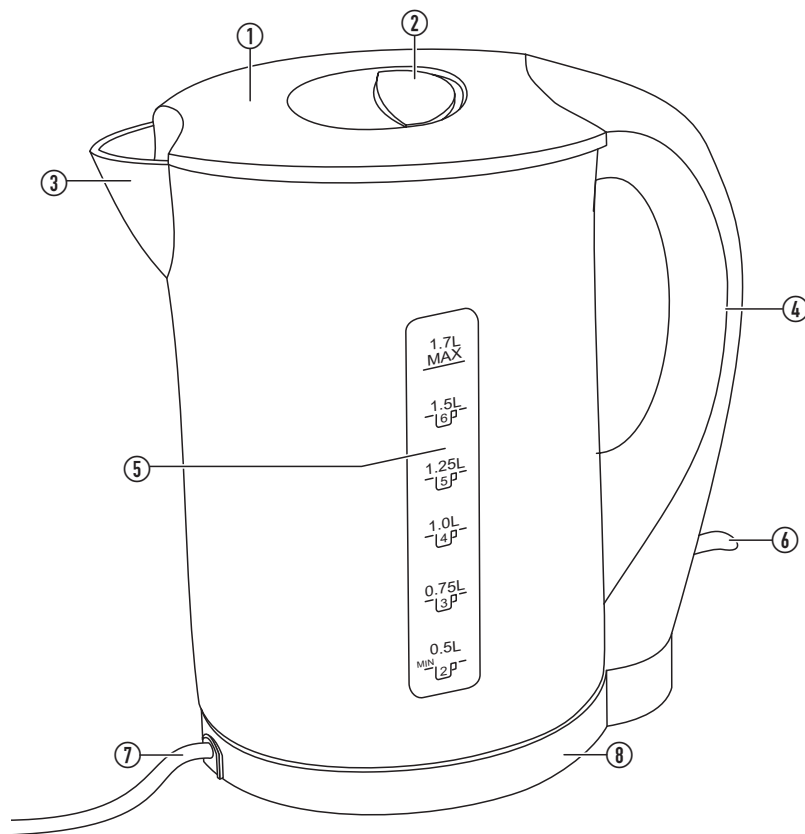

1. Lid
2. Lid catch
3. Spout
4. Handle
5. Water scale
6. On/Off switch
7. Power cord
8. Power base

UNPACKING

Unpack the kettle and power base from the carton.

Retain the carton and packing for future use. If you have to dispose of the carton and packing, please do so responsibly.

The carton should contain -


1 x KE01109-SA kettle.

1 x Power base (packed inside the kettle).

1 x Owner's handbook.

PLACEMENT

- Feed the power cable out through the slot under the power base as shown so that the base will sit flat.

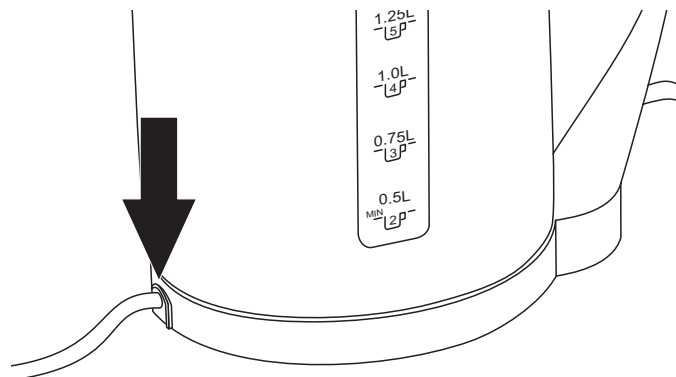

- Place the power base securely on a table or work-surface within easy reach of a power outlet.

Placement cautions

Ensure that the kettle is located out of the reach of children.

Never place the kettle under a cupboard or overhanging surface. Exposure to steam from the kettle may damage the surface.

KE01109-SA

OPERATION

First use

Before using your kettle to make any drinks you should ensure that it is thoroughly cleaned.

- Following the instructions in the next sections, fill the kettle to the maximum level with fresh water and boil the water.
- Discard the water and repeat the process two more times.

Your kettle is now ready to use.

Filling the kettle

- Pour away any water in the kettle.
- Pull back on the lid catch to open the lid.
- Fill the kettle through the top opening with fresh, cold water to the level you need on the water scale.

For safe operation, ensure that water is always visible between the max (1.7L) and min (0.5L) marks on the water scale.

Never fill the kettle through the spout as you may wash lime-scale back from the filter into the kettle.

- Close the kettle lid.
- Place the kettle on the power base.

Boiling the water

CAUTION: Never leave the appliance unattended when it is operational or containing hot water.

- Connect the power cable to a convenient outlet.
- Press the power switch down to the 'I' position.

The On/Off switch will light and the kettle will heat the water.

When the water boils the kettle will switch off automatically.

- Lift the kettle off the base and pour the water out slowly to make your drinks.

Switching the kettle off while operational

- Lift the power switch to the 'O' position.

The kettle will switch off.

If the kettle overheats

The kettle will overheat if it boils dry due to low water level.

The safety cutout will operate. Unplug the kettle and leave it to cool for 15 minutes. After this time, normal operation should be restored.

SPECIFICATIONS

Power supply 220 - 240V~, 50-60Hz

Power consumption..... 1850-2200W max.

Weight..... 0.65kg

IMPORTANT: THIS APPLIANCE MUST BE EARTHED.



KE01109-SA

WARRANTY

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Where a failure does not amount to a major failure, Woolworths is entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by Woolworths to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (eg from your doctor), depending on the loss or damage.
2. In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth), and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period of 12 months from the date of purchase.
3. In order to claim under this warranty you will need to bring the product to any Woolworths store, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product – in accordance with our Returns Policy, a copy of which is available at www.woolworths.com.au (and click on tab for About Us, Our Services, In Stores Services).
4. Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use.
5. The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.
6. This warranty is provided by Woolworths Limited of 1 Woolworths Way, Bella Vista NSW 2153, Phone: 1300 767 969.

Made for BIG W
1 Woolworths Way
Bella Vista NSW
2153 Australia

Made in China

Brilliant Basics KE01109-SA V0.1