



Owner's Handbook

KST008AB

4 Slice Toaster

IMPORTANT SAFETY INSTRUCTIONS	1	CARE AND CLEANING	8
CONTROLS AND FEATURES.....	4	Main body	8
UNPACKING.....	5	Crumb trays.....	8
PLACEMENT	5	TROUBLESHOOTING	8
Placement cautions:.....	5	DISPOSAL.....	8
OPERATION	6	SPECIFICATIONS.....	8
Twin toasters	6	WARRANTY.....	9
First use	6		
Which food items can be toasted?	6		
Toasting bread.....	6		
Toasting frozen bread.....	7		
Reheating toast.....	7		
If bread jams in the toaster	7		
After use	7		

Please keep your sales docket, including cash register receipt, in a safe place as the docket will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, preferably your sales docket.

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance for the first time.

- Always use the toaster from a power outlet of the same voltage (A.C. only) marked on the toaster.
- The toaster plug includes an earthed pin and must be used with a power outlet with earthed connection.
- Always turn the power off at the power outlet before you insert or remove the plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the toaster is not in use and before cleaning.
- Do not use the appliance with an extension power board.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not let the power cord of the toaster hang over the edge of a table or bench top or touch any hot surface.
- Do not place the toaster on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- For additional protection, it is recommended to use the toaster with a residual current device (RCD) with a tripping current not exceeding 30mA in the power socket which supply power to the toaster.
- Operate the toaster on a flat level surface and away from the immediate vicinity of water or other liquids.

IMPORTANT SAFETY INSTRUCTIONS

- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Do not move the toaster while switched on.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains. The toaster should be attended when in use.
- Do not allow crumbs to accumulate in the crumb tray, clean the crumb tray regularly.
- Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution. Allow the unit to cool down, unplug and remove jammed items.
- Do not leave the toaster unattended when in use.
- Do not use the toaster for any purpose other than its intended use.
- The toaster should not be used outdoors.
- Do not immerse the toaster in water or any other liquid.
- Regarding details on how to clean surfaces in contact with food, refer to section <CARE AND CLEANING>.

IMPORTANT SAFETY INSTRUCTIONS


- This appliance is intended to be used in household and similar applications such as :
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- The use of attachments or accessories not supplied with the appliance is not recommended.
- Do not cover the appliance when it is in use or has recently been used.
- Do not touch the body of the toaster when it is hot.
- The temperature of accessible surfaces may be high when the toaster is operating.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or electrical or mechanical adjustment.
- The following is the safe cautionary symbol of a Hot Surface accessible to people. This symbol alerts you to the hot hazards that you can be injured.



CAUTION, Hot surface. The surface can be hot and should not be touched without taking care.

CONTROLS AND FEATURES

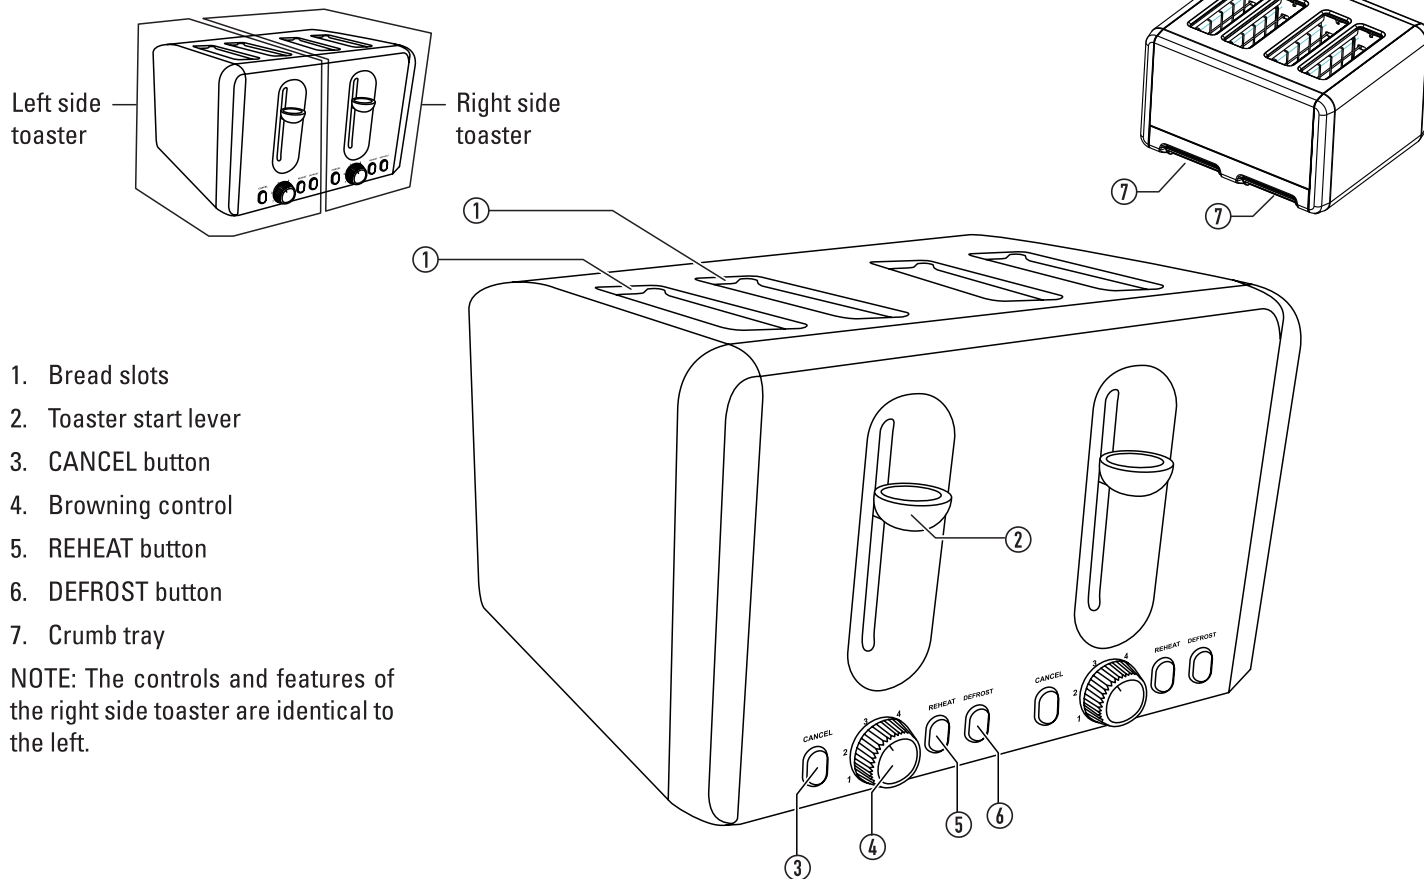

UNPACKING

Unpack the toaster from the carton.

Retain the carton and packing for future use. If you have to dispose of the carton and packing, please do so responsibly.

WARNING: Plastic bags can be dangerous. To avoid danger of suffocation keep bags away from babies and children.

The carton should contain -

1 x KST008AB 4 slice toaster.

1 x Owner's handbook.

PLACEMENT

- Place the toaster securely on a table or work-surface within easy reach of a power outlet.
- If the power cable is too long, you can wind a turn of cable around the clips under the base.

Placement cautions:

Ensure that the toaster is located out of the reach of children.

Never place the toaster under a cupboard or overhanging surface. Exposure to heat from the toaster may damage the surface or cause a fire hazard.

Ensure that no combustible items such as paper towels etc are placed near the toaster when operational.

OPERATION

Twin toasters

Your toaster includes two independent two slice toasters, side by side. You can use either of them to toast one or two slices of bread or both together to toast three or four slices.

Operation of each of the two toasters is identical.

First use

Before toasting bread in your toaster you should run both sections of the toaster twice for the maximum toasting time without any bread inserted. This will burn off any residues from the manufacturing process.

NOTE: When first used there may be a little smoke and a hot smell from the appliance. This is normal and will subside with further use.

Which food items can be toasted?

You can toast any type of sliced bread that will fit easily into the bread slots at the top of the toaster. You can toast a single slice in either of the bread slots, or toast two slices at once by using both slots.

Never attempt to force any oversize item into the toaster slots.

Never attempt to toast any item that is not bread-based.

Never toast any bread item that has been spread with butter or any type of spread or topping.

Toasting bread

- Connect the toaster power cable to mains power.
- Place the bread into the bread slots.
- Set the browning control to brown the toast to your preference.

The best settings will be found after some experience of using the toaster. As a general rule, wholemeal breads will require longer times than white breads. Setting the browning control to mid-way is a good starting point.

- Press the toaster start lever down until it latches in place.

The CANCEL button will light and the bread will start to cook. The toasted bread will pop up at the end of the toasting time you set.

- Lift the start lever if you need to raise the level to remove smaller slices of bread.
- Press the CANCEL button at any time to stop the toaster and pop up the bread.

Never attempt to remove bread while it is toasting, always press the CANCEL button first.

OPERATION

Toasting frozen bread

You can toast frozen bread straight from the freezer.

- Place the frozen bread in the toaster, set the browning control and press the start lever down.
- Press the DEFROST button within ten seconds.

The DEFROST button will light. When the defrost function has been selected, extra toasting time is added to defrost the frozen bread.

Reheating toast

If your toast has cooled, you can use the toaster to reheat it.

- Place your cooked toast back in the bread slots and press the start lever down.
- Press the REHEAT button within ten seconds.

The REHEAT button will light. When the reheat function has been selected, a short time cycle will warm up your toast without burning it. The browning control setting does not change the reheat time.

If bread jams in the toaster

- Disconnect mains power immediately and allow the toaster to cool.
- Carefully remove the bread from the toaster.
- If the bread breaks up when you remove it, empty the crumb tray before using the toaster again.

Never attempt to remove jammed bread while the toaster is connected to mains power.

Never use a knife or any sharp utensil to remove jammed bread. This may damage the appliance.

After use

Disconnect the toaster from the mains and allow it to cool.

If necessary, move it to a position which is out of reach of children and pets.

CARE AND CLEANING

- Disconnect the toaster from mains power and ensure it has cooled before cleaning it.

Main body


- Wipe the main body clean with a slightly damp cloth.
- Dry thoroughly before use.

Never clean the toaster with scourers, abrasive pads or chemicals.

Crumb trays

Two removable crumb trays catch crumbs that drop from the bread as it is toasted. The crumb trays must be emptied on a regular basis to avoid build-up of crumbs that could ignite.

- Pull out the crumb tray.

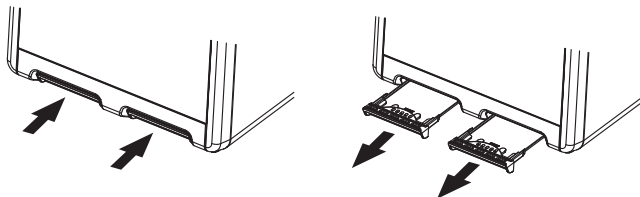

- Empty the crumbs and wipe the crumb trays clean.
- Slide the crumb trays back into the slot in the toaster base.

TROUBLESHOOTING

The start lever will not lock down.

Check if mains power is connected. The start lever will only lock down when mains power is connected.

Sparking inside the toaster.

This is normal and may sometimes happen when the start lever is pressed down or when the toast pops up after cooking.

DISPOSAL

Waste electrical products /batteries should not be disposed of with household waste. Separate disposal facilities exist. Contact your local authority for details.

SPECIFICATIONS

Power supply..... 220 - 240V~, 50 - 60Hz

Power consumption..... 1550-1850W

IMPORTANT: THIS APPLIANCE MUST BE EARTHED.



WARRANTY

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Where a failure does not amount to a major failure, BIG W is entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by BIG W to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (eg from your doctor), depending on the loss or damage.
2. In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth), and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period of 24 months from the date of purchase.
3. In order to claim under this warranty you will need to bring the product to any BIG W store, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product – in accordance with our Returns Policy, a copy of which is available at our return desk
4. Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use.
5. The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.
6. This warranty is provided by BIG W of 1 Woolworths Way, Bella Vista NSW 2153, Phone: 1300 244 999.

contempo™

Made for Big W
1 Woolworths Way
Bella Vista NSW
2153 Australia

Made in China

CONTEMPO KST008AB V1