



Owner's Handbook

MK1400-SA
Milk Frother

IMPORTANT SAFETY INSTRUCTIONS	1
CARE AND CLEANING	4
UNPACKING.....	4
INTRODUCTION.....	4
PLACEMENT	4
CONTROLS AND FEATURES.....	5
OPERATION	6
SPECIFICATIONS.....	8
WARRANTY	9

Please keep your sales docket, including cash register receipt, in a safe place as the docket will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, preferably your sales docket.

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance for the first time.

- Always use the appliance from a power outlet of the same voltage (A.C. only) marked on the appliance.
- This appliance plug includes an earthed pin and must be used with a power outlet with earthed connection.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use the appliance with an extension power board.
- For additional protection, it is recommended to use the appliance with a residual current device (safety switch) with a tripping current not exceeding 30mA in the power socket which supply power to the milk frother.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance shall not be operated by means of an external timer or separate remote control system.
- The appliance must only be used with the power base supplied.
- Always operate the appliance on a flat, level surface.
- Do not let the power cord of the appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Do not operate the appliance when empty.
- Never fill the appliance above the correct maximum mark in the appliance for heating or frothing.

IMPORTANT SAFETY INSTRUCTIONS

- Always operate the appliance with the cover in place.
- Do not place the appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- **WARNING:** Do not operate the appliance with the lid removed or remove the lid while milk is being frothed or heated.
- Do not leave a hot milk frother near or where children may touch it.
- This appliance is not suitable for use by persons (including children) who have limited physical, sensory or mental abilities, or by persons who have a lack of experience and/or lack of knowledge unless they are supervised by a person in charge for their security or receive instructions by them on how to use the milk frother.
- Children should be supervised to ensure they do not play with the appliance
- **CAUTION:** Do not move the appliance while switched on.
- Never leave the appliance unattended while in use.
- Do not use the appliance for any purposes other than for heating up and/or frothing milk.
- Do not use the milk frother outdoors.
- Avoid contacting moving parts.
- Do not immerse the appliance in water or any other liquid.
- Use of attachments or accessories not recommended or sold with the appliance may cause personal hazards, injuries or property damage.
- Never put hands or utensils inside the jug of the appliance.

IMPORTANT SAFETY INSTRUCTIONS

- CAUTION: Exercise caution when removing the lid of this appliance as the contents will be hot.
- CAUTION: Exercise caution to avoid spilling liquid contents on the power connector.
- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
- Injury may result from misuse of this appliance.
- The heating surface will remain hot after use. Avoid any contact with this surface.
- The appliance must be allowed to cool between operations. After use, allow 3 minutes rest time before next use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or electrical or mechanical adjustment.
- This appliance is intended to be used in household and similar applications such as :
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

CARE AND CLEANING

Disconnect the milk frother from mains power and ensure it has cooled before cleaning.

Never immerse the jug or base when cleaning.

Never clean the milk frother with scourers, abrasive pads or chemicals.

None of the milk frother components are dishwasher safe.

Jug lid, stirrer, frothing spring

- Remove any attachments.
- Hand-wash the jug lid, stirrer and frothing spring in a mild detergent solution.

Jug

- Wash inside the jug with a mild detergent solution.
- Wipe the outside of the jug clean with a slightly damp cloth.
- Dry thoroughly before use.

UNPACKING

Unpack the milk frother and power base from the carton.

Retain the carton and packing for future use. If you have to dispose of the carton and packing, please do so responsibly.

The carton should contain -

- 1 x MK1400-SA milk frother
- 1 x Frothing spring
- 1 x Mixing paddle.
- 1 x Power base.
- 1 x Owner's handbook.

INTRODUCTION

Your milk frother includes a heated jug and a stirrer.

You can choose to heat milk in the jug, or with the frothing spring fitted to the stirrer, froth milk with or without heating.

PLACEMENT


- Place the power base securely on a table or work-surface within easy reach of a power outlet.

Placement cautions


Ensure that the milk frother is located out of the reach of children.

CONTROLS AND FEATURES

FRONT VIEW

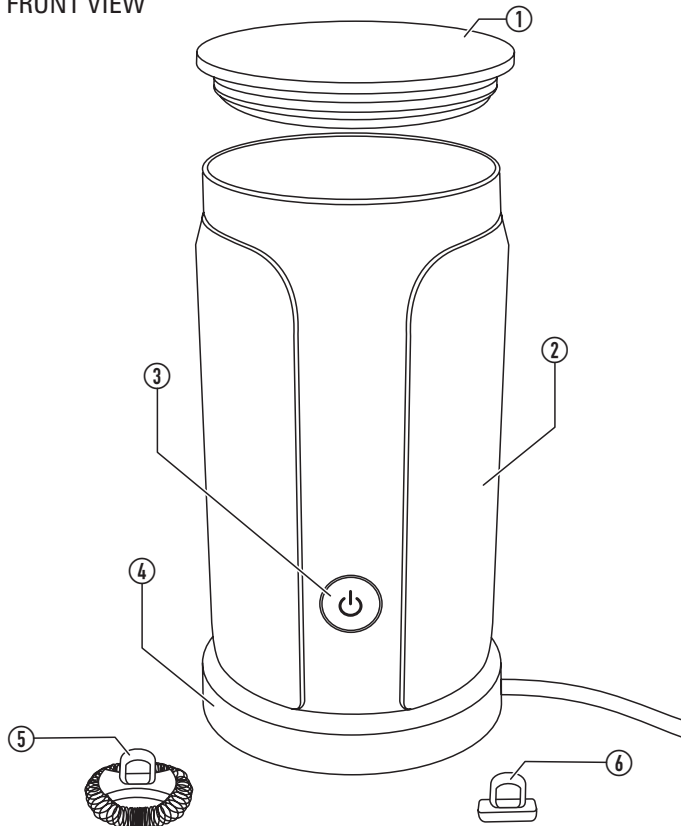

TOP VIEW

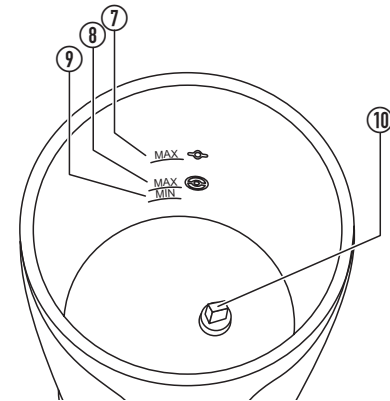

- | | |
|---------------------------|----------------------|
| 1. Lid | 6. Stirrer |
| 2. Body | 7. Max stirring mark |
| 3. Power switch/indicator | 8. Max frothing mark |
| 4. Base | 9. Minimum mark |
| 5. Frother | 10. Spindle |

OPERATION

First use

Before using your milk frother to make any drinks you should ensure that it is thoroughly cleaned.

- Following the instructions in the Care and Cleaning section to clean the appliance thoroughly.

Your milk frother is now ready to use.

Operational modes

CAUTION: Never leave the appliance unattended when it is operational or containing hot milk.

The Milk Frother has three modes of operation -

- Heat and froth milk.
- Heating milk only.
- Frothing cold milk only.

CAUTION: Never leave the appliance unattended when it is operational or containing hot milk.

Frothing spring and paddle


A frothing spring and stirring paddle are supplied as accessories. One of these attachments is fitted on the spindle inside the jug (refer to the top view on page 5 for the location of the spindle).

The frothing spring is fitted for frothing milk.

The stirrer paddle is fitted when heating milk.

Heat and froth milk

- Lift off the lid.
- Fit the frothing spring to the spindle inside the jug.
- Pour milk into the jug.

For safe operation, ensure that the level is above the 'MIN' mark inside the jug, and never exceeds the maximum mark  (125ml) for frothing milk.

- Replace the lid.
- Place the jug on the base and connect the power cable to a convenient outlet.
- Press the POWER button.


The power indicator will light red and the frother will spin to froth the milk.

The appliance will run and switch off automatically when the milk is heated and frothed.

OPERATION

Heating milk

- Lift off the lid.
- Fit the stirring paddle to the spindle inside the jug.
- Pour milk into the jug.

For safe operation, ensure that the level is above the 'MIN' mark inside the jug, and never exceeds the maximum mark  (250ml) for stirring milk.


- Replace the lid.
- Place the jug on the base and connect the power cable to a convenient outlet.
- Press the POWER button.

The power indicator will light red and the paddle will spin to stir the milk.

The appliance will run and switch off automatically when the milk is heated.

Frothing cold milk

- Lift off the lid.
- Fit the frothing spring to the spindle inside the jug.
- Pour milk into the jug.

For safe operation, ensure that the level is above the 'MIN' mark inside the jug, and never exceeds the maximum mark  (125ml) for frothing milk.

- Replace the lid.
- Place the jug on the base and connect the power cable to a convenient outlet.
- Press and hold the POWER button for 2 seconds.

The power indicator will light blue and the frother will spin to froth the milk.

The appliance will run and switch off automatically when the milk is frothed.

OPERATION

When the milk is ready

When the milk is ready, the milk frother will switch off automatically.

- You can now lift the milk frother off the base, remove the lid and pour the milk out slowly.
- Follow the instructions in the Care and Cleaning section to clean the appliance immediately after use.

Switching the milk frother off while operational

- To switch off the milk frother when operating, press the POWER button.

The milk frother will switch off.

Continuous use

The milk frother must be rested for a minimum of 3 minutes after two consecutive uses. Leave the body on the base while resting.

SPECIFICATIONS

Power supply 220 - 240V~, 50-60Hz

Power consumption..... 450-550W

IMPORTANT: THIS APPLIANCE MUST BE EARTHED.



E285

WARRANTY

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Where a failure does not amount to a major failure, BIG W is entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by BIG W to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (eg from your doctor), depending on the loss or damage.
2. In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period of 24 months from the date of purchase.
3. In order to claim under this warranty you will need to bring the product to any BIG W store, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product – in accordance with our Returns Policy, a copy of which is available at our return desk
4. Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use.
5. The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.
6. This warranty is provided by BIG W of 1 Woolworths Way, Bella Vista NSW 2153, Phone: 1300 244 999.

contempo™

Made for Big W
1 Woolworths Way
Bella Vista NSW
2153 Australia

Made in China

CONTEMPO MK1400-SA V0.2