



Owner's Handbook

HM419
Hand Mixer

IMPORTANT SAFETY INSTRUCTIONS	1	AFTER USE	8
CONTROLS AND FEATURES.....	4	Storage	8
UNPACKING.....	5	CARE AND CLEANING	8
PREPARATION	5	SPECIFICATIONS.....	8
Hand mixer features.....	5	WARRANTY.....	9
Work area.....	5		
OPERATION	6		
First use	6		
Fitting the beaters	6		
Fitting the dough hooks.....	6		
Removing attachments	6		
Using the hand mixer	7		
Turbo button.....	7		
When your mixture is ready.....	7		

Please keep your sales docket, including cash register receipt, in a safe place as the docket will prove the commencement of the period of this warranty. If you wish to make a claim specifically under this manufacturer's warranty, you will be required to provide proof of purchase, preferably your sales docket.

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance for the first time.

- Always use the appliance from a power outlet of the same voltage (A.C. only) marked on the appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug from power outlet when the appliance is not in use, before putting on or removing parts and before cleaning.
- Do not immerse the motor or control unit into water or other liquids.
- Do not attempt to dislodge food or any item from the unit when it is still powered on. Ensure the unit is turned off before using a wooden or plastic spatula to do so.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance shall not be operated by means of an external timer or separate remote control system.
- Do not let the power cord of the appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not place the appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not use the appliance near flammable material such as curtains, draperies and wallpaper.


IMPORTANT SAFETY INSTRUCTIONS

- For additional protection, it is recommended to use the appliance with a residual current device (safety switch) with a tripping current not exceeding 30mA in the power socket which supplies power to the appliance.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not suitable for use by persons (including children) who have limited physical, sensory or mental abilities, or by persons who have a lack of experience and/or lack of knowledge unless they are supervised by a person in charge for their security or receive instructions by them on how to use the appliance.
- Always operate the appliance on a flat, level surface.
- Do not use the appliance for any purpose other than its intended use.
- Do not leave the appliance unattended during use.
- Do not use outdoors.
- The use of accessories or attachments not supplied with the appliance is not recommended.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from the mixer during operation to reduce the risk of injury to persons, and/or damage to the mixer.

IMPORTANT SAFETY INSTRUCTIONS

- Do not continuously operate the mixer too long. The motor may overheat. It can be operated without interruption for a maximum of 3 minutes and should be allowed to cool down for approximately 20 minutes before the next operation.
- This appliance is intended to be used in household and similar applications such as :
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

CONTROLS AND FEATURES

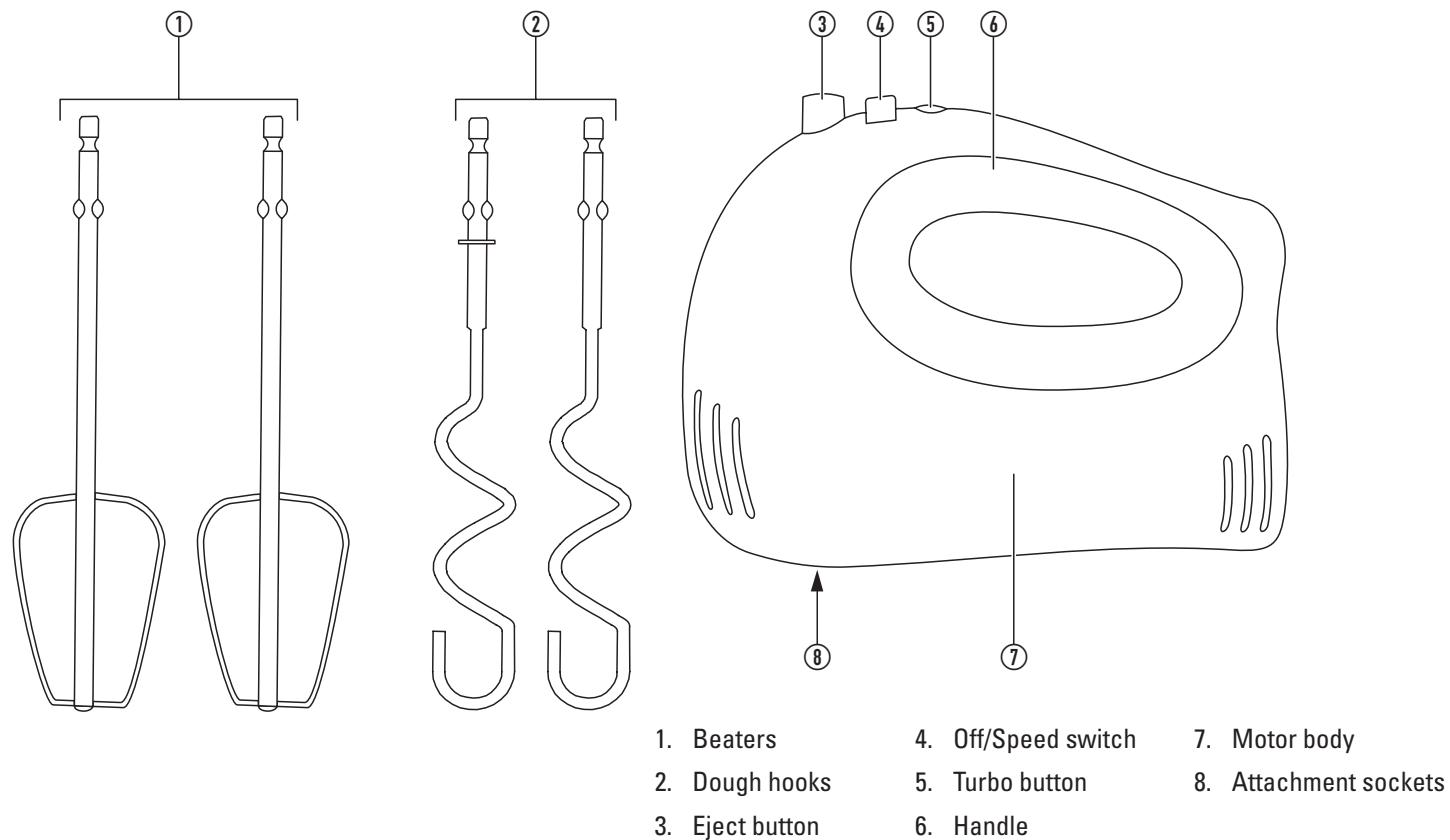

HM419

UNPACKING

Unpack the mixer motor body and accessories from the carton.

Retain the carton and packing for future use. If you have to dispose of the carton and packing, please do so responsibly.

The carton should contain -

1 x Hand mixer

2 x Beaters

2 x Dough hooks

1 x Owner's handbook.

PREPARATION

Hand mixer features

The mixer has two sets of attachments -

- Beaters for whipping egg white and cream, making cakes and mixing batters.
- Dough hooks for heavier mixes such as pastry and kneading dough, also mashed potato.

Work area

Before using your hand mixer, prepare a clear, uncluttered work area near to a mains power outlet where the cable will not be at risk of being pulled.

OPERATION

First use

Before using your hand mixer for the first time you should ensure that the components are thoroughly cleaned.

- Follow the instructions in the Care and Cleaning section to clean all components thoroughly before first use.

Fitting the beaters


- Push the beaters into the attachment sockets under the mixer.
- Twist them slightly while pushing until they click home.

The beaters will be locked in place.

Fitting the dough hooks

The dough hooks are fitted in the same way as the beaters, but the hook shapes are different and each must be fitted into the correct attachment socket.

- One of the dough hooks has a ring on the shaft. Fit this hook first into the larger attachment socket on the underside of the mixer.
- The second dough hook can then be fitted.

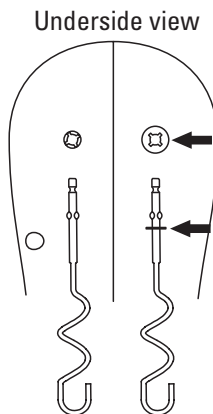

Removing attachments

- Switch off the mixer.
- Disconnect mains power.
- Press the eject button.

NOTE: The eject button can only be operated when the Off/Speed switch is set to the '0' (off) position.

- Lift the attachments off the motor body.

OPERATION

Using the hand mixer

- Collect all your ingredients together before starting. Choose a mixing bowl that has plenty of room for the mixture.
- Add the first ingredients to the mixing bowl.
- Set the Off/Speed switch to '0' (off).
- Plug the power cable into a mains outlet.
- Holding the mixer by the handle, place the beaters or dough hooks into the mixture and gradually increase the mixing speed in the range 1 to 5 until you reach the speed you want.
- Move the beaters around a little in the mixture to help it circulate.

Keep the beaters immersed in the mixture at all times to avoid splashing the mixture from the spinning beaters.

- If you need to add ingredients or re-distribute the mixture in the bowl, switch off the mixer first.

NOTE: The maximum operating time when using the mixer is three minutes. If you exceed this time you must rest the unit for twenty minutes.

Turbo button

The Turbo button enables you to boost mixing power if you need more power briefly.

- Press and hold the Turbo button.

The mixing power will increase while the button is pressed.

NOTE: The Turbo button should only be pressed for a few seconds at a time. Running the mixer with the Turbo button pressed continually may damage the mixer.

When your mixture is ready

- Switch off the mixer.
- Disconnect the power cord.
- Lift the mixer out of the mixture and set it aside in a safe place while you complete your recipe.

AFTER USE

- When you have finished using the mixer, disconnect the power cable and remove the attachments.
- Immediately after use, follow the instructions in the Care and Cleaning section to clean the components you used.

Storage

- When all the components are dry, coil the power cable loosely and store the mixer and attachments out of reach of children and pets.

CARE AND CLEANING

Never clean any of the mixer components with scourers, abrasive pads or chemicals.

- Disconnect the mixer from mains power before cleaning it, then remove any attachments that are fitted.
- The beaters and dough hooks are dishwasher-safe so may be washed in the dishwasher. Alternatively, hand-wash them in a mild detergent solution.
- Wipe over the mixer body with a dampened cloth.
- Dry all components thoroughly after cleaning.

SPECIFICATIONS

Power supply.....220 - 240V~, 50Hz

Power consumption..... 230W



Class II double insulated.



WARRANTY

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Where a failure does not amount to a major failure, BIG W is entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by BIG W to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (eg from your doctor), depending on the loss or damage.
2. In addition to all rights and remedies to which you may be entitled under the Competition and Consumer Act 2010 (Commonwealth) and any other relevant legislation, the manufacturer warrants this product to be free from defects in materials or workmanship for a period of 24 months from the date of purchase.
3. In order to claim under this warranty you will need to bring the product to any BIG W store, along with proof of purchase (typically this will be a receipt). Any cost incurred by you in bringing the product to the service desk will be borne by you. We will then, at our option, either repair or replace the product, or refund your money and take back the product – in accordance with our Returns Policy, a copy of which is available at our return desk
4. Our liability under this manufacturer's warranty is subject to us being satisfied that a defect was caused by defective workmanship or materials, and was not caused by or substantially contributed to by other factors, or circumstances beyond our control, including (but not limited to) defective installation, maintenance or repair, alteration or modification of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use.
5. The benefits conferred by this manufacturer's warranty are in addition to all rights and remedies conveyed by the Competition and Consumer Act 2010 (Commonwealth), and any other statutory rights to which you may already be entitled, and this warranty does not exclude, restrict or modify any such rights or remedies that are implied by law.
6. This warranty is provided by BIG W of 1 Woolworths Way, Bella Vista NSW 2153, Phone: 1300 244 999.

contempoTM

Made for Big W
1 Woolworths Way
Bella Vista NSW
2153 Australia

Made in China

CONTEMPO HM419 V0.2